

biomorph[®] personal desk

ASSEMBLY INSTRUCTIONS
Questions? Call 888 302 DESK




Frame Hardware (included in CARDBOARD carton with frame)

- A. 1" black allen screw x 2
- B. 3/4" silver allen screw x 8
- C. 1/2" silver screw x 2
- D. plastic ball x 2 E. rod x 2
- F. allen wrench x 1
- G. hand crank x 1
- H. black inserts x 2
- I. large angle bracket x 1

Top Hardware (included in WOODEN crate with tops)


- J. 1" silver screw x 8
- K. 3/4" silver screw x 2
- L. 1/2" silver screw x 1
- M. black grommet x 2
- N. small angle bracket x 1

Frame Parts Inventory

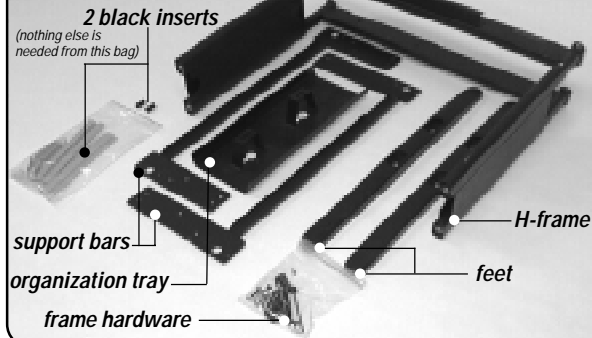

Desk Side View


Tops arrive in wooden crate

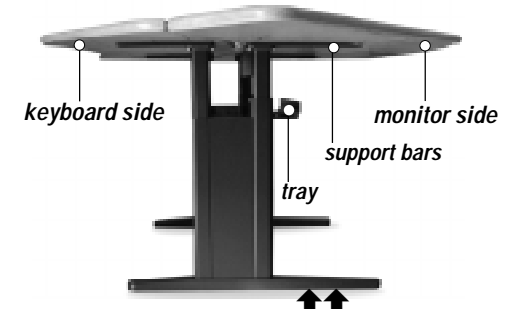

IMPORTANT! Place longer part of feet & support bars at the back of the desk where the monitor surface mounts.




A. x 2

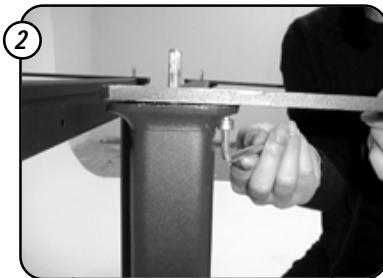


B. x 8



Screw tight!

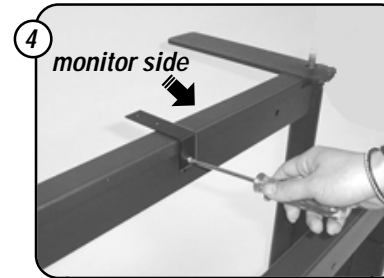

N. x 1 L. 1/2" x 1

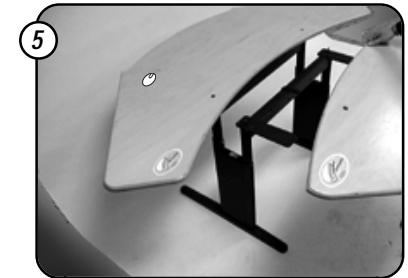


Place top on frame so that crank posts fit in corresponding holes.



E. x 2 Remove after mounting tops



J. 1" x 8

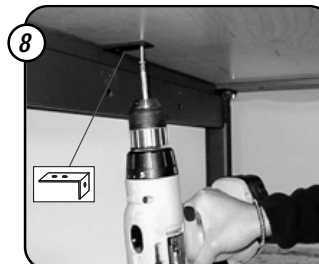

K. 3/4" x 2



I. x 2 H. 1/2" x 2



E. D. x 2

